






# Compaq 6720s Technique

Written By: Internet Libre

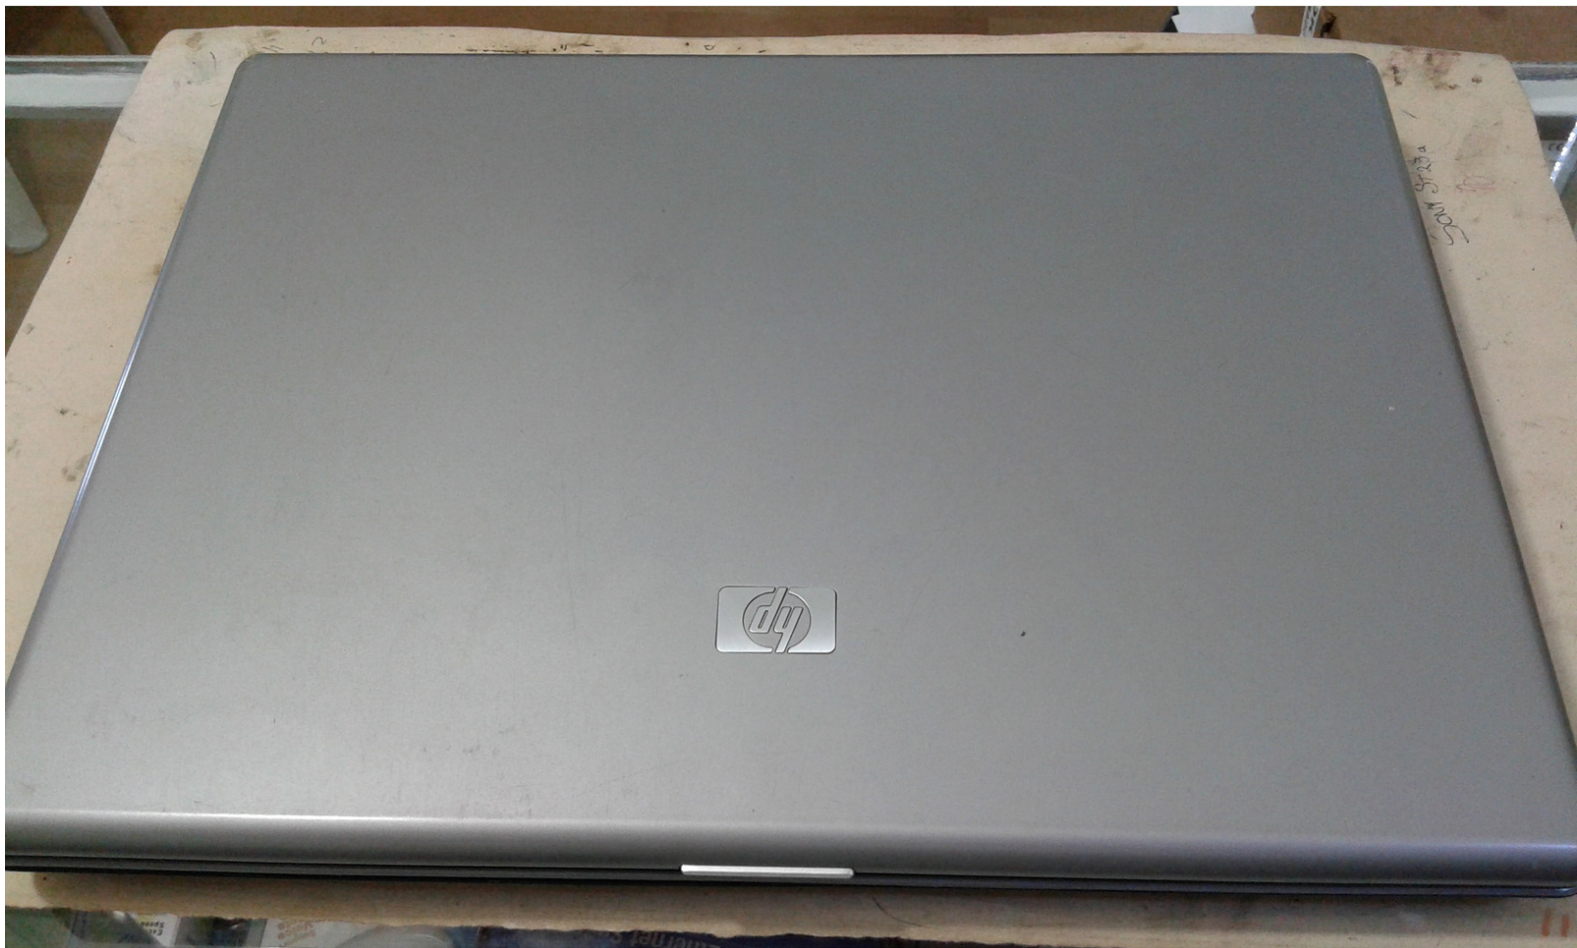


## Step 1 — Compaq 6720s Technique

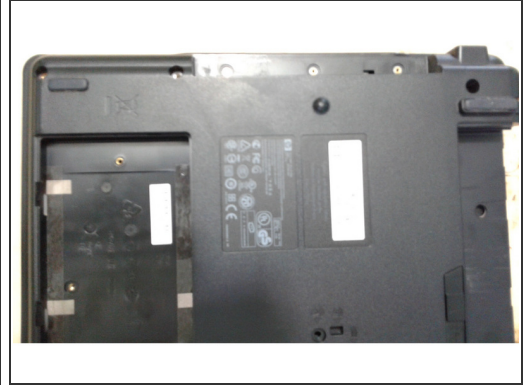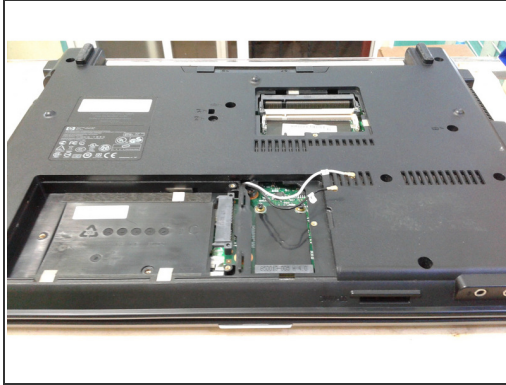

- Desassembly Compaq 6720s
- Spread the HDD cover and ram cover out, and remove them and every screw.
- Release the dvd driver and remove three screws under it. Don't forget one screw under the HDD

## Step 2

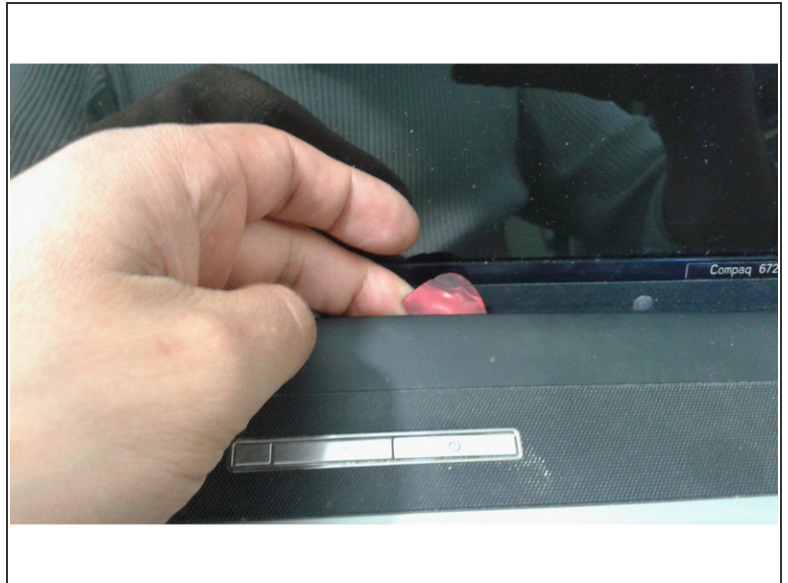

- Turn the laptop right side up and open it
- Pull the power button cover up, first the boundary beside screen and then the parallel of it. Use a pry tool if necessary

To reassemble your device, follow these instructions in reverse order.

